

Attacher Arrow


The Attacher Arrow is a drawing aid used to quickly position Items on the drawing. Its primary use is to determine the position and direction / rotation of the next Item to be added.


The Attacher picks up information about the Item to which it is attached, i.e. Size, Service, Layer, Specification, Connectivity, etc.

Positioning the Attacher on an Item will make the **Service** associated with that item the **Active Service**.

Procedure

Attaching and Rotating the Attacher:

From the toolbar **Click** on the **Attacher**  Icon or at the **command line** enter **Set Attacher**
Click nearest the End of the Item you wish to set the Attacher to.

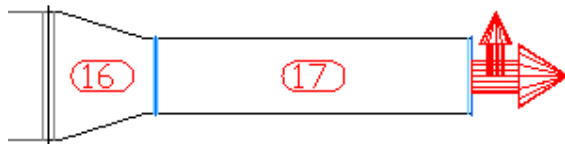


After snapping, the Attacher Arrow command is still active.

Click the Attacher to **rotate 90 degrees**. The small arrow rotates.

To control the rotation angle:

Operation	Result
Ctrl + Click	180 Degree rotation
Alt + Click	15 Degree rotation on Circular

Note: the Alt Click option is only available when the Attacher is located on products that have a **Round** cross section.

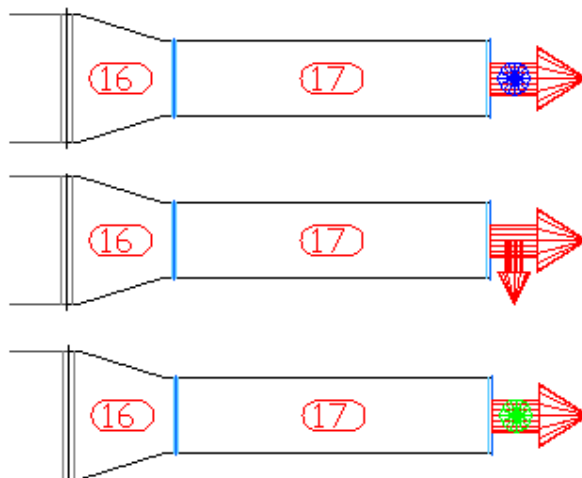

Making the most of CAD-Duct Solids

The Attacher is **colour coded**. Red is plan, blue indicates the arrow direction is +Z (setting up) and green indicates -Z (setting down).

Remember, **Blue** for **Sky**, **Green** for **Ground**.

After positioning and rotating the Attacher, the next Item added will be orientated accordingly.

The Attacher can be positioned or rotated in any view.

Hiding the Attacher

To hide the Attacher and prevent it from showing on plots,

Right click on the drawing

Click CadDuct BSS > **Hide Attacher**

Alternatively

Hold the **Shift** key down and **click** on the Attacher icon.